


# visualInstall Series

	<b>Project</b>	<b>Application</b>	<b>Original Release</b>
	'05+ JDM TYPE S RR BADGE	2002-2006 RSX	Feb 2005 Date vS-PDF Issued Oct 2006

## PARTS LIST

1 JDM 2005 Type S rear hatch badge, part #: 75717-S6M-J01



## TOOLS AND SUPPLIES REQUIRED

- Masking tape
- String
- Tape measure

## INSTALLATION

### NOTE:


- Difficulty Level: [03/10] easy
- Time required: 30 minutes

### I. DEBADGING THE OEM EMBLEMS

1. This is actually easier said than done! Take your string and begin sawing the emblems out. Started debadging the Type S emblem first because it is smaller and easier to remove:



For best results, "saw" off the emblems using these guides:

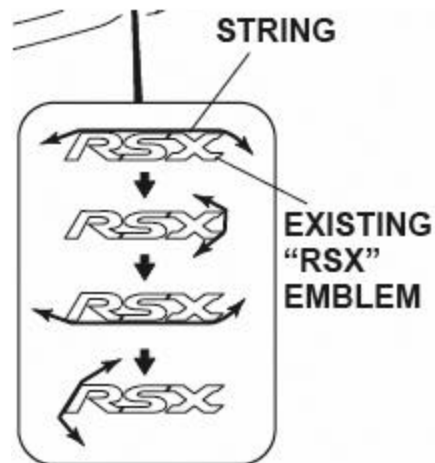

- This may take you up to 10 minutes or more. Take your time as you do not want to scratch up your hatch while debadging the emblems. Once the emblems are debadged, you may have some of the adhesive residue left over:




If the badges are relatively new, you can just peel the residue off with your finger nails. If they have been on the car for a while, you will want to use isopropyl alcohol and rub it off with a Kleenex napkin.

Debadged:



## II. ATTACHING THE TYPE S BADGE

- Use your tape measure in conjunction with your masking tape and measure and mark the following template. Take your time because you want to do everything right the *first* time. Use pieces of masking tape as temporary markers. Once you've got the dimensions measured up, take a piece of masking tape and tape the adhesive backing of the Type S badge onto the hatch:

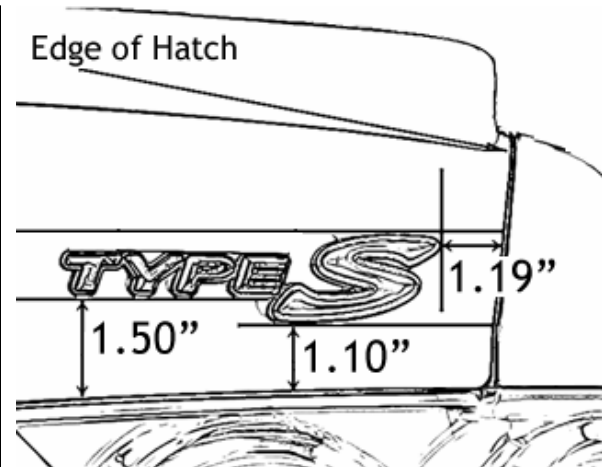

- Next, take pieces of masking tape and secure them around the Type S badge. Place them around the badge as guides. Later, you will remove the badge and secure it within these guide lines:



- Once you are done marking the area, remove the badge from the hatch:



The masking tape will serve as application guidelines.

4. Next, you will want to make absolutely sure that the spot where the badge is going to attach is clean. If it isn't, wet a few Kleenex napkin and scrub away, then dry completely. Once you are sure that the surface area is clean and dry, peel off a small piece of adhesive backing from the Type S badge, beginning with the "T" and a little of the "y" and slowly align and attach the badge onto the hatch.

5. Adjust the badge so that it aligns with the surrounding masking tape. Once everything is aligned, press on the badge with your palm and hold the exposed adhesive portion for 30 seconds. Next, slowly continue to peel off the adhesive backing while pressing on the badge with your palm:



6. Continue until the last piece of adhesive backing is peeled:



Remove all the masking tape and press on the badge with your palm and hold the badge down toward your hatch for 30 seconds. Keep pressing until the entire badge is evenly secured onto your hatch.



### THE FINISHED PRODUCT

